

Fig. 1(b)

Fig. 1(a)

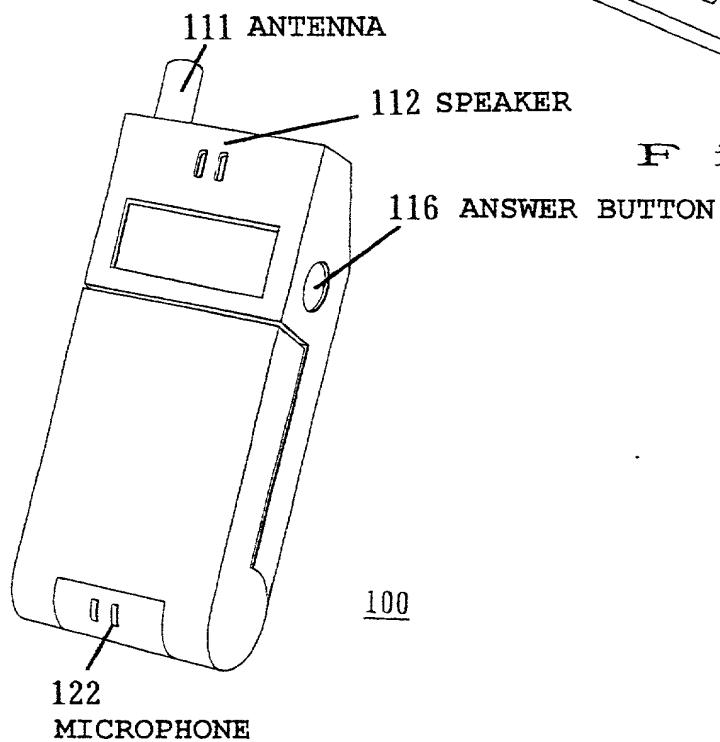 


Fig. 1(c)

Fig. 2
(a)


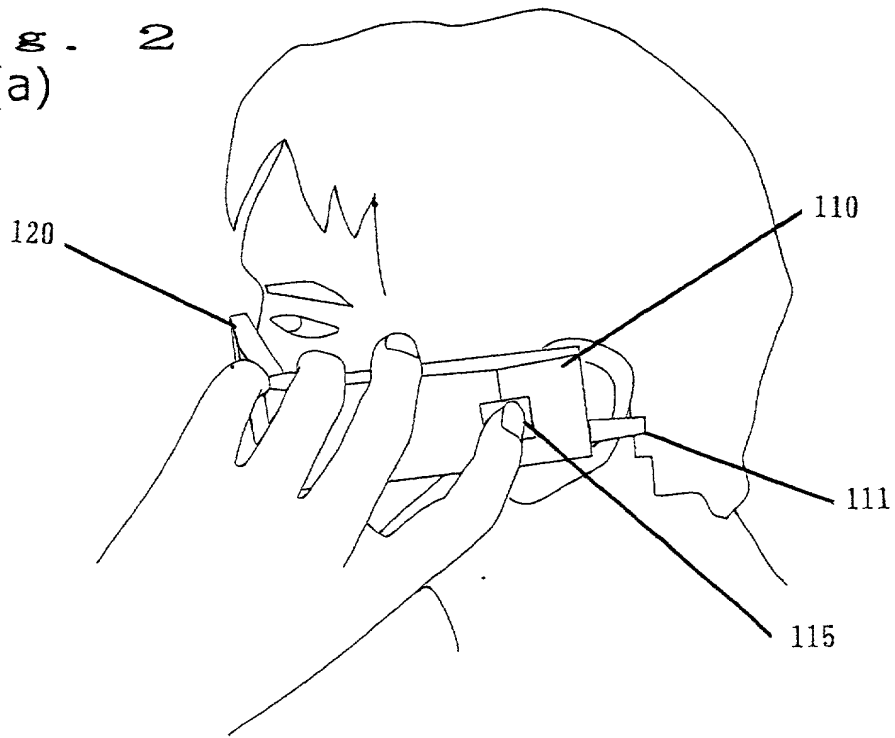 


Fig. 2
(b)

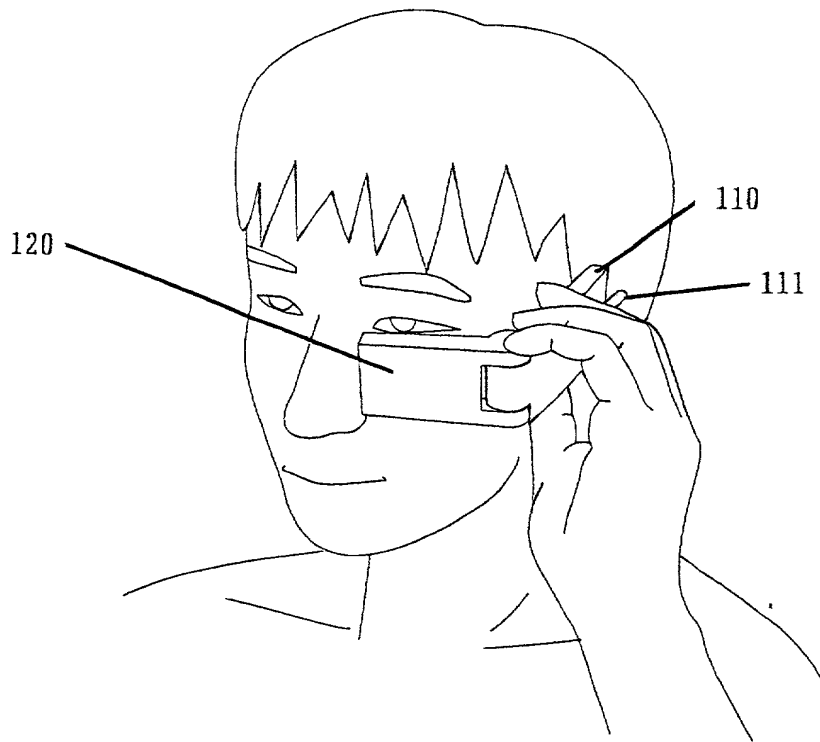 

POINTING DEVICE
115

ANTENNA
111

100

F i g . 3 (b)

111 ANTENNA

112 SPEAKER

MAIN BODY
PART 110

AUXILIARY
DISPLAY
PART 113

116
ANSWER
BUTTON

100

114
INPUT PART

122
MICROPHONE

130
HINGED PART

121
DISPLAY SURFACE

SECOND HINGE
131

MAIN SCREEN
DISPLAY PART
120

F i g . 3 (a)

111 ANTENNA

112 SPEAKER

116 ANSWER BUTTON

100

122 MICROPHONE

F i g . 3 (c)

Fig. 4(a)

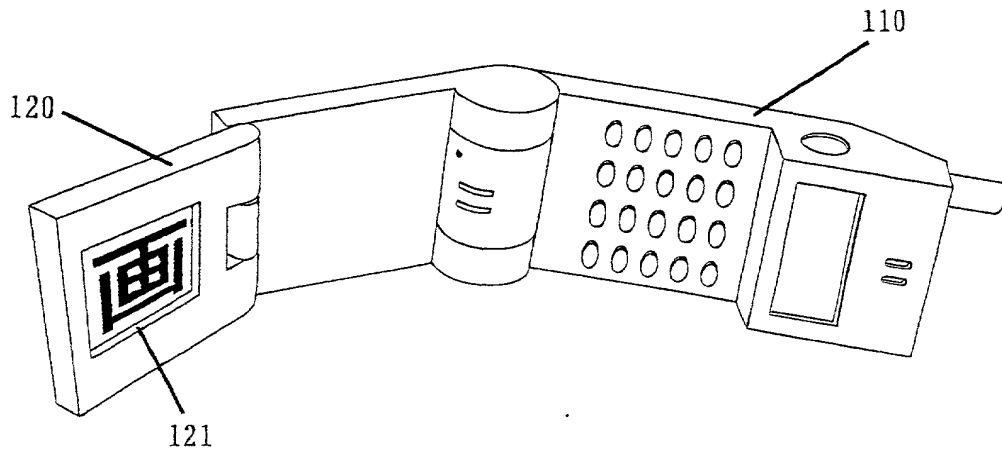 


Fig. 4(b)



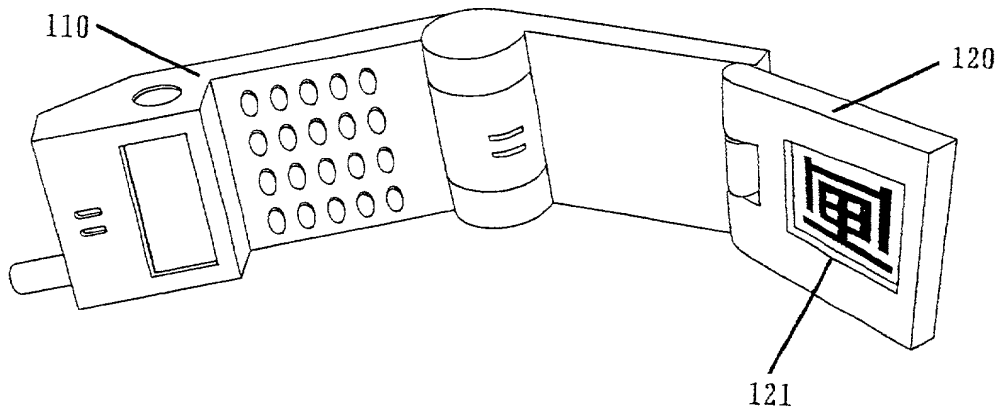 



Fig. 4(c)

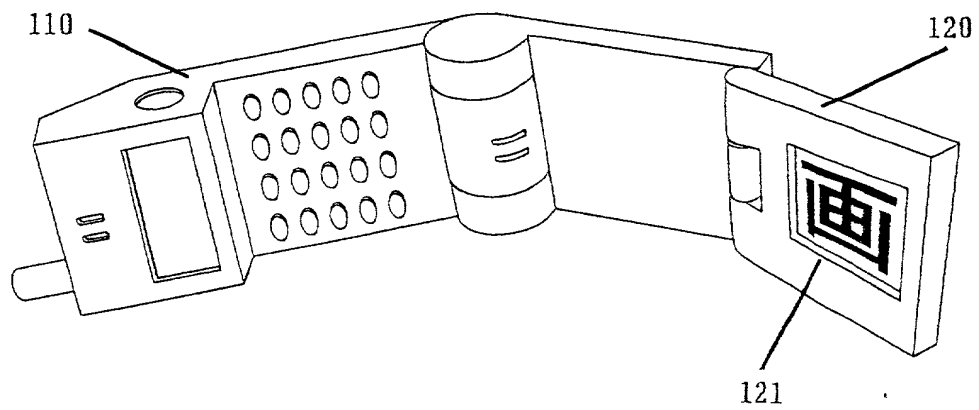 


F i g . 5

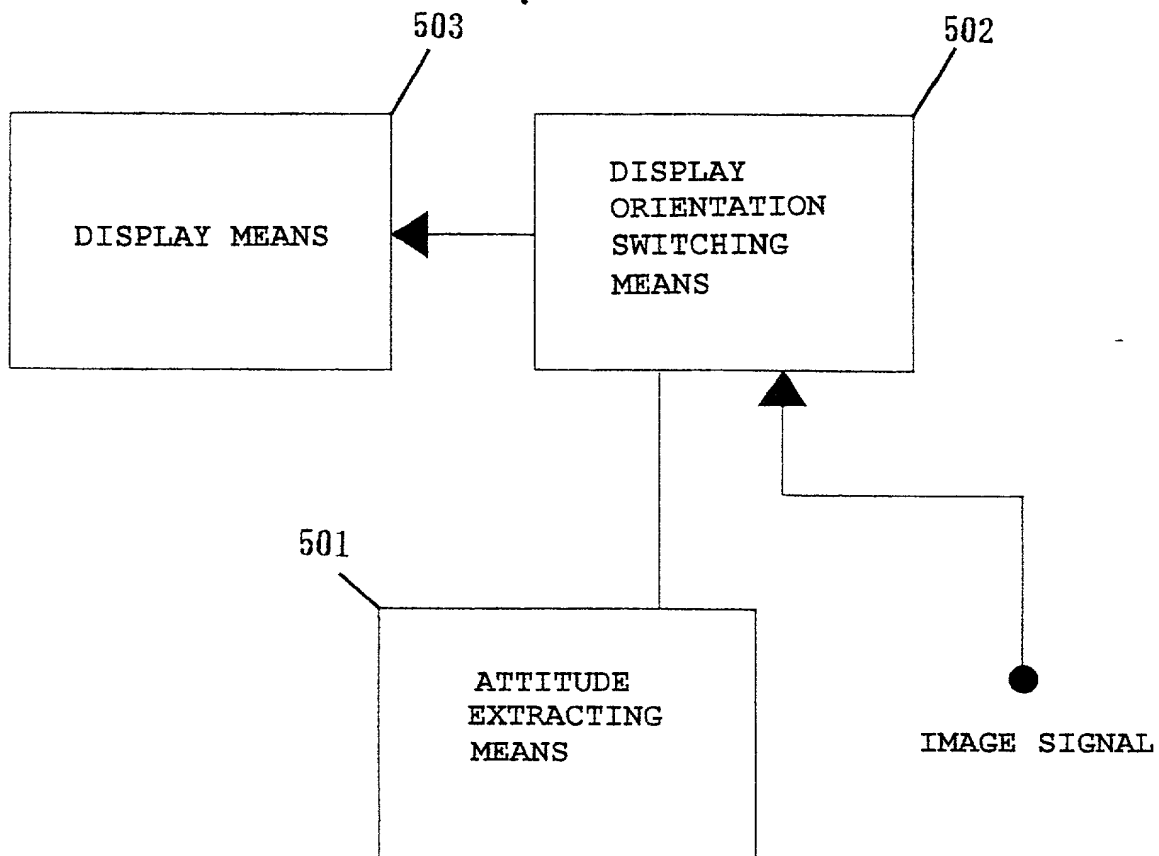 

F i g . 6 (a)

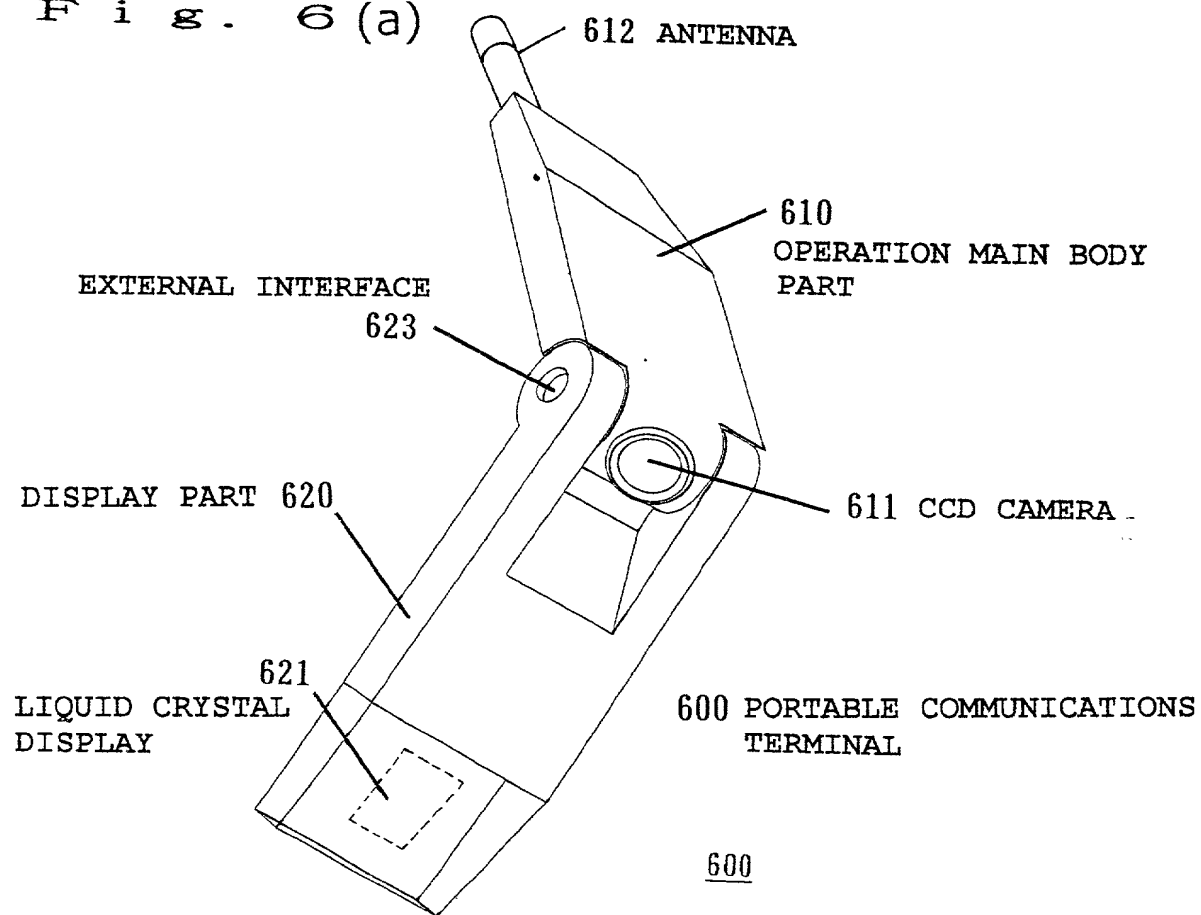 

F i g . 6(b)

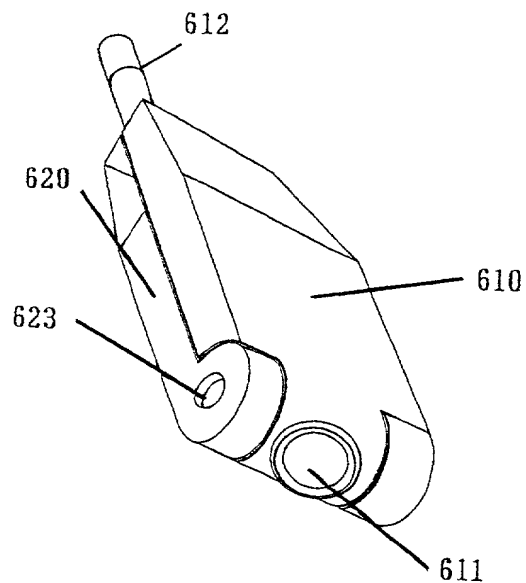 



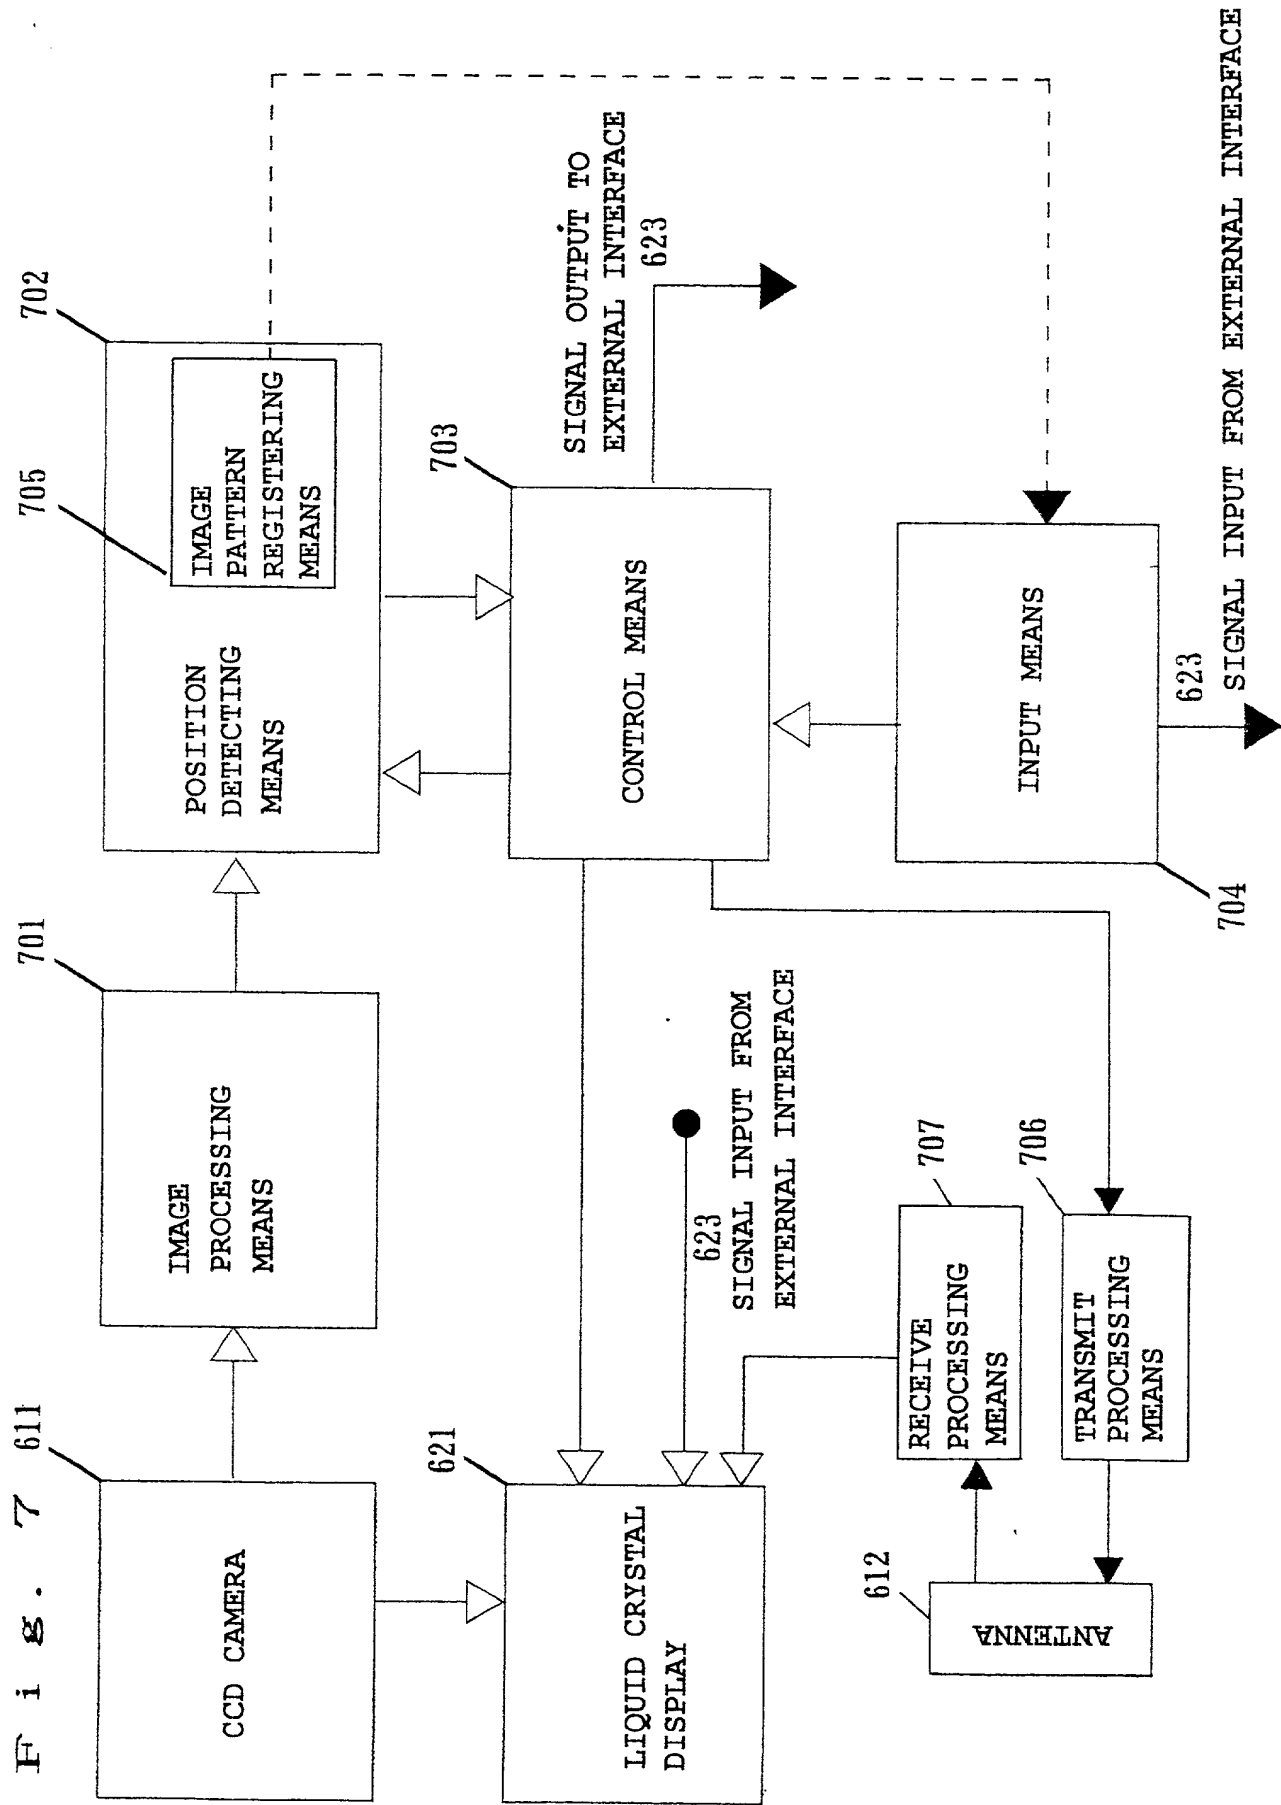 



Fig. 8

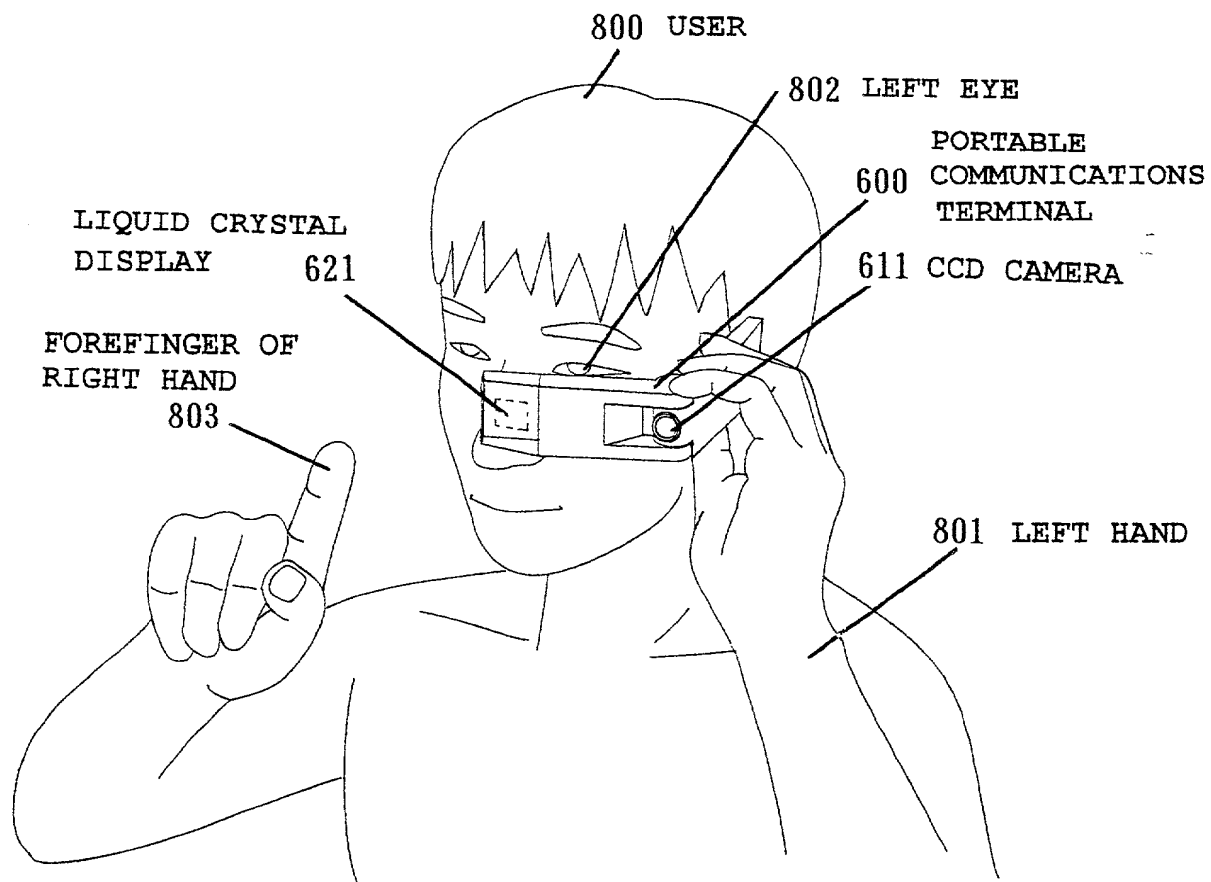 


F i g . 9 (a)

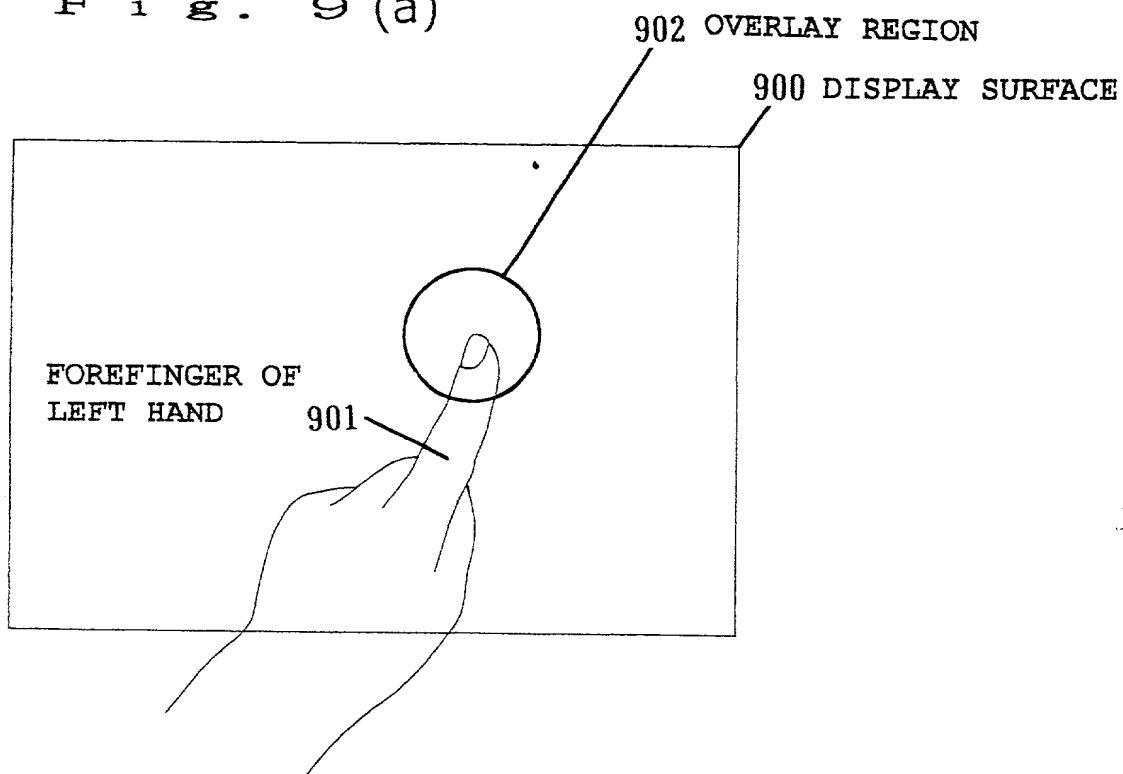 


F i g . 9 (b)

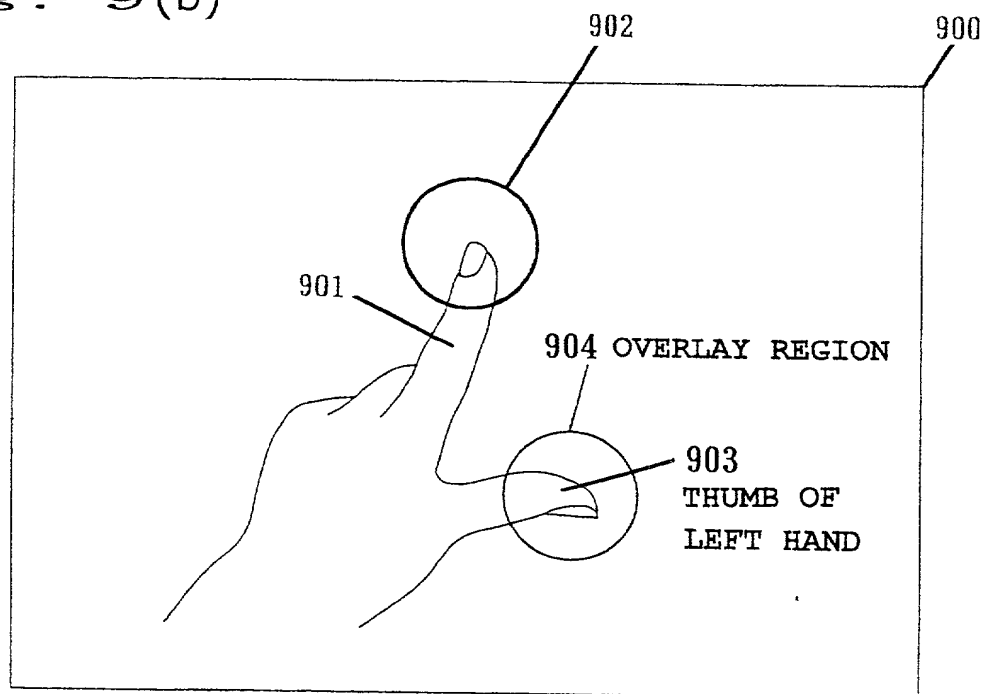 


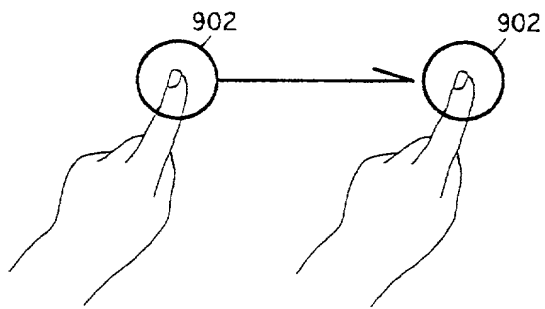 


F i g . 1 0
(a)

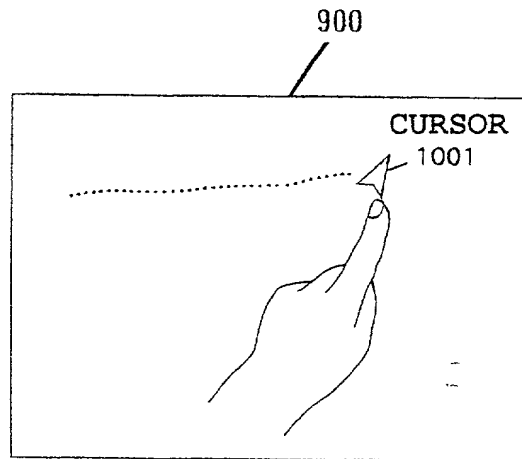 


F i g . 1 0
(b)

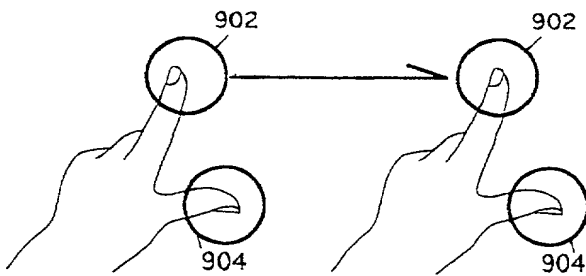 

F i g . 1 0
(c)

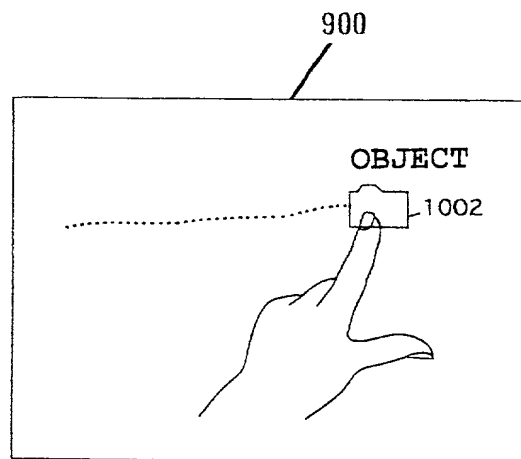 


F i g . 1 0
(d)




F i g . 1 2

 
F i g . 1 2

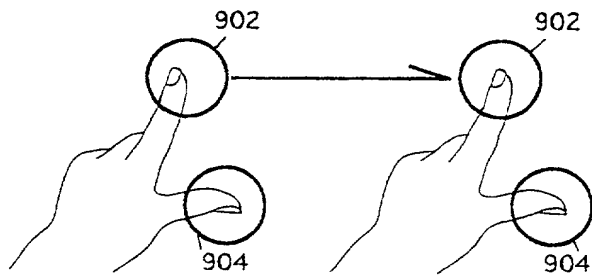


F i g . 1 3
(a)

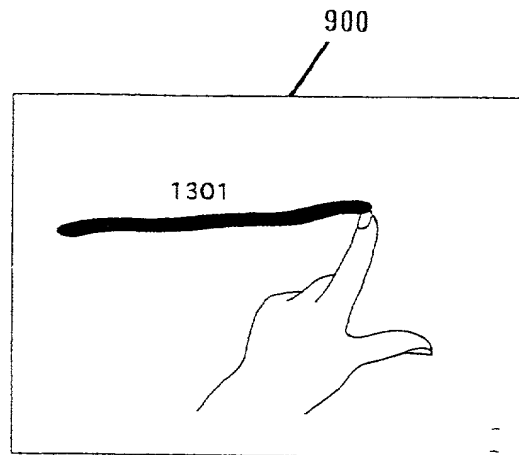 


F i g . 1 3
(b)

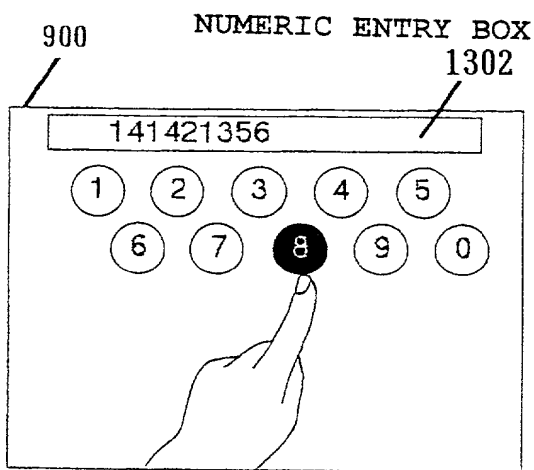 


F i g . 1 3
(c)

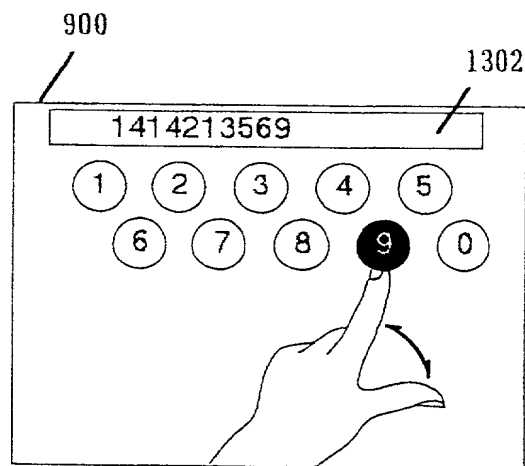 


F i g . 1 3
(d)

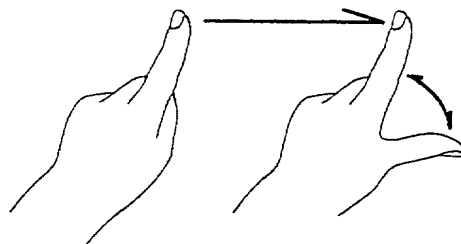 

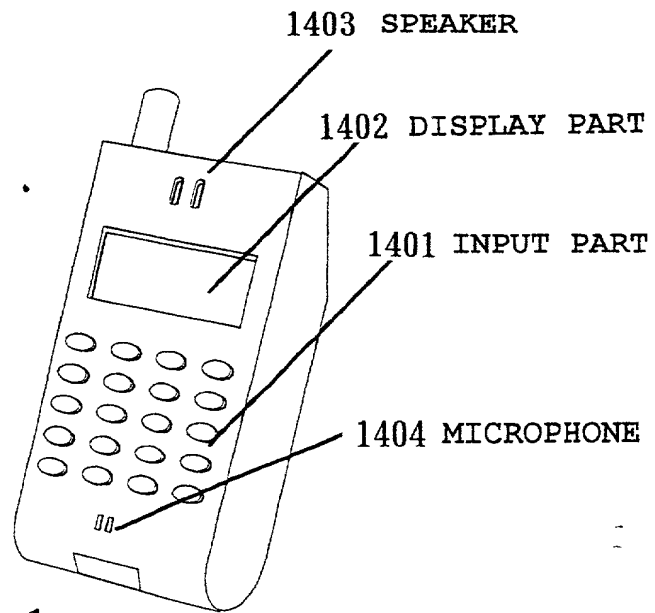 

F i g . 1 4
(a)

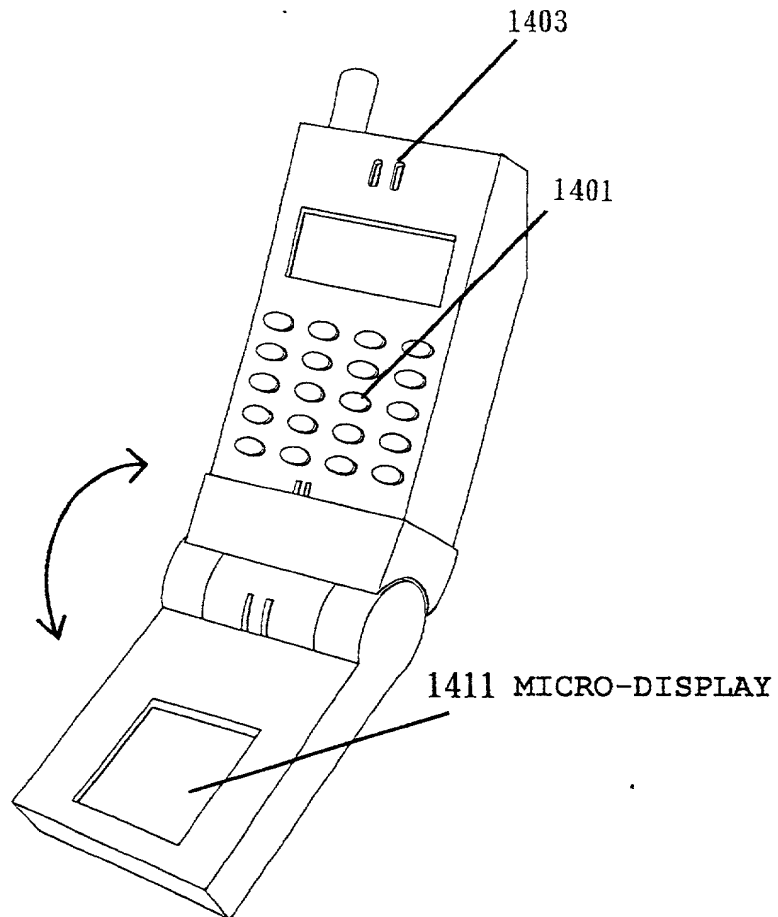 

F i g . 1 4
(b)

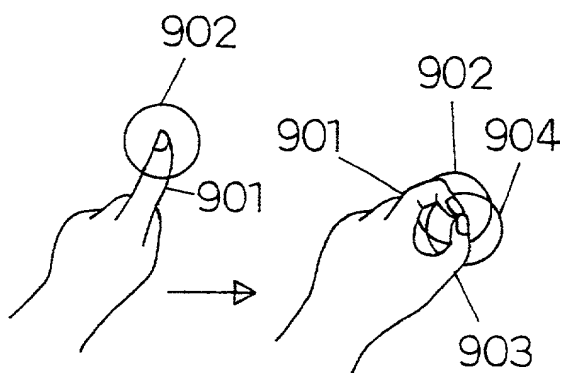 


Fig. 15
(a)

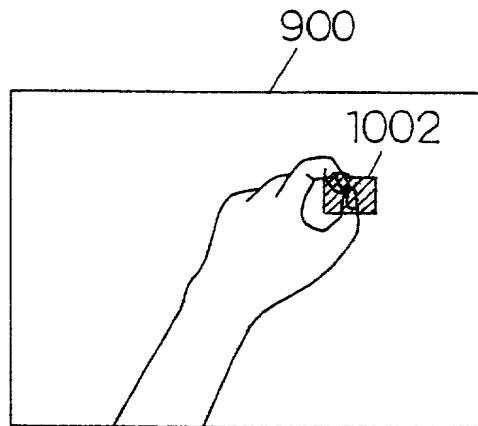 


Fig. 15
(b)

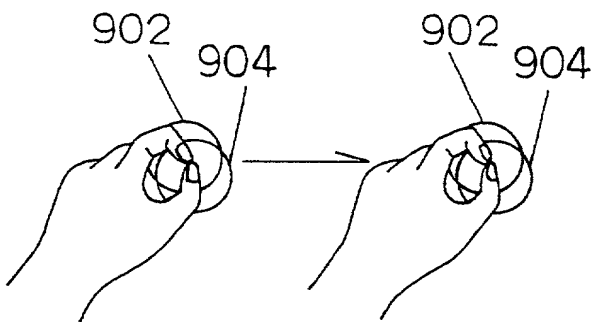 


Fig. 15
(c)

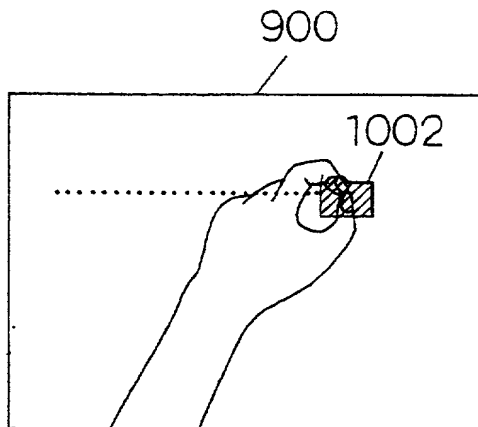 


Fig. 15
(d)

Fig. 16
(a)

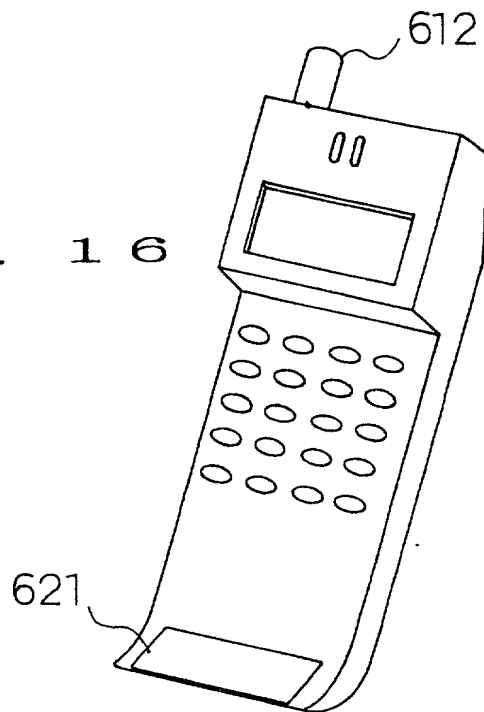 


Fig. 16
(b)

